



Guide to completing: New Connections Below 100 Amps Application

Introduction

Why use this form

This form should be used to apply for **New Connections** to:

- o Establish or alter a residential or commercial connection **up to 100 Amps**; and
- o Do not have plant, motors or equipment **rated at 30 Amps** or more;
- o Intend to connect multiple premises where the total maximum demand at the location is 100 Amps or less

The form contains these sections:

- 1. Form Symbols and what they mean 3
- 2. Location4
- 3. Applicant Details 5
- 4. Service Selection Types – New Connections Only
 - I. Load Details 7
 - II. Summary 9
 - III. Payment 12
- 5. Service Selection Types - New Connection and New Embedded Generation or Stand-by Generation
 - I. Load Details14
 - II. Summary 19
 - III. Payment 22

Why complete this form?

Ausgrid needs the information requested in this form so it can assess your connection requirements and make you a connection offer under the National Electricity Rules as they apply in New South Wales.

IMPORTANT:

You will need to complete all mandatory fields in order to be able to submit the form. Providing incorrect or incomplete information will result in an invalid application; this will mean that you will have to complete a new application and pay an additional submission fee.

This form is designed to be completed by a Qualified Electrical Professional. To provide some of the answers to these questions you will need to consult an electrical contractor or Accredited Service provider (ASP) who may need to attend the site.

Form Symbols – What they mean

Reference Code

All Forms are identified by unique Reference Codes.
Please keep a record of your application reference code. If you have enquiries about your application, we will require this number to assist you.

Reference Code : 0011613

 
Navigation through the form

The forms have been designed to assist you to quickly navigate and complete all the required information in a tabular step by step format.



1. Each section must be completed before moving onto the next step.
2. Complete sections are marked WHITE with GREEN TEXT
3. Current section are marked BLUE with WHITE TEXT
4. Next sections are marked with a WHITE with GREY TEXT

Completing sections



1. The process allows you to go BACK as required
2. You can SAVE & SHARE the application as you go, share the application link, return at any time and continue
3. As you complete a section, click NEXT to proceed

Mandatory Fields

1. Mandatory fields are identified with the use of *
2. Mandatory fields must be completed before proceeding
3. Non completed mandatory fields are shown as

*Phase A

 
4. Tool tips and help are shown as




This is the Unit/Shop number for the individual premises. A separate line item is required for each Unit/Shop connection

Useful buttons to help get things done

1. Duplicating a section
2. Add a new section
3. Browse to find file/s to upload and attach to your application



 4. Calendar Icon Opens date picker

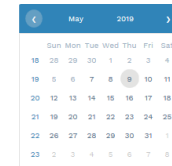

5. Checkbox
6. Radio button (select only one) Yes No
7. Drop Down selection – allows you to select from prepopulated list of options

Location Information

New Connection Below 100 AMP Reference Code : 0011616

Location Applicant Service Selection Load Details Summary and Payment Complete

Retailer 1

Property Name Property Type 2 *Land Title Type 3

Floor Number Unit/Shop Number *Street Number/RMB or *Lot Number or *Lot/DP Number 4

*Street Name Nearest Cross Street

*Suburb *Postcode *Land Zoning 5

Next

1. If you know who the Retailer will be, select the **company** details from the drop down menu.
2. Select the **Property Type** from the drop down menu for example: House, Unit, Shop etc.
3. Select the **Land Title Type** from the drop down menu for example Torrens, Strata, Community Title, Public or other.
4. Enter the **address** where the new connection is required, this could be entered either as a Street/RMB Number, Lot Number or Lot/DP Number which can be found on the Development Application (DA) or council rate notice.
5. Select the **Land Zoning** from drop down menu for example: Urban, Rural or Other
Note: *The Landing Zone information should auto populate with data from the NSW Government Planning Portal.*

Applicant Information

New Connection Below 100 AMP Reference Code : 0011616

Location **Applicant** Service Selection Load Details Summary and Payment Complete


***Applicant Type** 1

***Title** ***First Name** ***Last Name**

***Email Address** ***Confirm Email Address**

Floor Number **Unit/Shop Number** ***Street Number/RMB** or ***PO Box/Locked Bag** 2

***Street Name** **Nearest Cross Street**

***Suburb** ***Postcode** ***Phone Number**  **Other Number**

Back Save & Share Next



Note: The email address supplied for the Connection Applicant will be utilised for ALL communication in relation to your Connection Application. The NMI and / or Permission to Connect emails will only be sent to the provided connection applicant email address.



Phone Number must be 10 characters with **NO** spaces

1. Select the **applicant type** from the drop down menu for example: ASP, Electrical Contractor, Retail Customer etc.

Note: If you are the person who requires an electricity connection for your own use (for example in your house or business) then you are a **retail customer**.

If you are applying for electricity to supply to a development which will be sold off and you will not be the end user of the electricity at this premises then you are a **real estate developer**.

If you are applying on behalf of someone, then select the category from the drop down menu that best describes you. (For example ASP on behalf of a retailer Customer or Real Estate Developer).

2. This section calls for the **applicant details** of the person making the application. YOUR details – i.e. the person lodging this form.

Note: If you are not a retail customer or real-estate developer, you must ensure that the person on whose behalf you are applying has authorised you to make an application, receive and accept a connection offer from Ausgrid on their behalf.

Service Selection – New Connection Only

Note: This section relates to New Connection Only

New Connection Below 100 AMP

Reference Code : 0011616

Location

Applicant

Service Selection

Load Details

Summary and Payment

Complete

Services

What type of service are you seeking?

1



New Connection Only

2



New Connection and
New Embedded
Generation or Stand-by
Generation



To provide some of the answers to these questions you may need to consult an electrical contractor or ASP who may need to attend the site.

Back

Save & Share

Select the **service** you are seeking by clicking on one of the tiles.

1. **New Connection Only.** Requires you to provide information regarding the physical electrical connection needed for Ausgrid to accurately assess your application and provide you with an appropriate Model Standing Offer for Connection Services.
2. **New Connection and New Embedded Generation or Standby Generation.** Choose this for all new embedded generation being installed as part of a new connection to the network. This part of the form allows Ausgrid to determine if you intend to install embedded or standby generation as part of your application.

A generating unit is embedded if it will be connected in parallel with Ausgrid's network (even if only momentarily).

Examples of embedded generation includes:

- Solar PV
- Wind turbine
- Blue Gen
- Gas
- Bio gas
- Diesel
- Co and Tri-generation

Load Details – New Connection Only

New Connection Below 100 AMP

Reference Code : 0011616

Location

Applicant

Service Selection

Load Details

Summary and Payment

Complete

New Connection



*Proposed Point of Common Coupling

1

*Asset Identifier

2

*Proposed Connection Point

3

*Proposed service length greater than 50 metres

Yes No

*Proposed Service Type

4

*Service Voltage

Low voltage 230/400v



To provide some of the answers to these questions you may need to consult an electrical contractor or ASP who may need to attend the site.

NOTE: You may need to refer to NSW Service and Installation Rules for the definition of the terms.

This section requires you to provide information regarding the physical electrical connection needed for Ausgrid to accurately assess your application and provide you with an appropriate **Model Standing Offer for Connection Services**.

This section captures information regarding the components of the distribution system (premises connection assets) which is used to provide the connection service to the premises e.g. service cable, metering, new Ausgrid pole, pillar or substation etc.

1. Select the **proposed point of common coupling** from the drop-down menu.
2. Provide the **asset identifier** for the point of common coupling – if there is no asset identifier enter 'unknown'.
3. Select the **proposed connection point** from the drop-down menu – this is the component of the distribution system (premises connection assets) used to provide the connection services to the premises.
4. Select the **service type and voltage** from the drop-down menus.

Specify the **proposed length of the service** – if greater than 50 meters, the applicant will be required to provide the exact length in meters.

The above information specifies the start and finish points of your service wire as well as the type of connection. You should specify these matters carefully as they will become part of the connection contract unless modified by Ausgrid.

Load Details – New Connection Only

***Service Size**
100 Amps 1


***Proposed Maximum Demand** ⓘ Number of Phases 2 Phase A Phase B Phase C

Address – Gardinia Street, Narwee, 2209


***Premises Usage** ***Property Type** **Floor Number** ***Unit/Shop Number** 3
VILLA 7 ⓘ

***Proposed Maximum Demand** ⓘ ***Number of Phases** Phase A Phase B Phase C 4

***Are you intending to connect, alter or maintain controlled load at this premises?** ⓘ Yes No 5

helpful tips  Premise details can be edited, deleted and duplicated Duplicate + Add New

Total Number of Premises
1 ⓘ

Comments
 This section is provided to supply additional comments, and upload attachments such as site diagrams

Attachment Browse File...

Back Save & Share Next

1. Select **Service Size** from the drop-down menu if Other than 100 Amps – specify the demand that is nearest to but above the calculated maximum demand in the additional field displayed.
2. Select the **Number of Phases** from the drop-down menu. Select each phase (Phase A, Phase B, Phase C) and enter the total proposed maximum demand for the site.
3. Provide the **details of all premises** in the application. (Address details will be pre populated from the location information).
This is the number of NMIs applicants are requesting to be created. You are required to complete the information specific to each premises – Premises Usage, Property Type, Floor Number and Unit/Shop Number if applicable.
Note: The premises can only be located at the address provided in the Location details section.
4. For each premises, select the Number of Phases from the drop-down menu; then for each phase (Phase A, Phase B, Phase C) specify the proposed maximum demand.
5. If intending to connect controlled load at the premises check 'yes'. Then select the controlled load tariff (Off-peak 1 or Off-peak 2) from the drop-down menu, and select the number of phases that this will apply to.

Summary - New Connection ONLY



Home Applications ▾ FAQ Help Contact Us

New Connection Below 100 AMP

Reference Code : 0012730

New Connection

LOCATION

Retailer
Agl
Land Title Type
Strata
Street Number/RMB
8
Location Address
Gardinia Street, Narwee, 2209
Land Zoning
Urban

1

[Edit]

2

APPLICANT

Applicant Type
Asp On Behalf Of A Retail Customer Or Real Estate Developer
Full Name
Mr Test Asp
Email Address
Test@ASP.com.au
Street Number/RMB
10

1. **Review** your application.
2. You will have the option to edit information from this summary page by **Review** associated fees.



Note: The form will not be submitted to Ausgrid until payment has been made.

Summary - New Connection Only

EXPEDITED CONNECTION

Option A

Do you want to expedite your connection offer for all premises?

Yes No

1

You can download the Basic Connection Services Offer - up to 100 Amps for your records [here](#).

OPTION A – [Expediting your connection offer](#)

1. Select **YES** to expedite your connection.

Note: By selecting 'Yes', and requesting an expedited connection offer, the connection application will be processed more efficiently because; if Ausgrid agrees that the offer is right for your proposed connection and there is no need for the offer to be sent to you, signed and returned to Ausgrid.

OPTION B – [Accept a Model Standing Offer](#)

1. Select **NO** if you do not want to expedite your connection offer.
2. Select **YES** if you agree to the Terms and Conditions of the offer. You are able to Review the models standing offer by selecting [\(here\)](#)

Note: The connection application will be processed efficiently because if Ausgrid agrees that the offer is right for your proposed connection and there is no need for the offer to be sent to you, signed and returned to Ausgrid. .

OPTION C – [Negotiate a connection offer](#)

1. Select **NO** if you do not want to expedite your connection offer.
2. Select **NO** if you don't agree to the **Terms and Conditions** of the offer.

Note: if you do not accept the terms and conditions, Ausgrid will send you an offer that meets your supply requirements.



The expedited connection process allows you to save time by skipping the offer and acceptance steps to a connection contract. If you request expedition and indicate that a particular model standing offer is acceptable, the contract is taken to have begun on the day we received your connection application, provided we agree that any model standing offer you have nominated is appropriate. If you do not request expedition or you nominate an inappropriate model offer, it could add up to **55 days** to your connection process.

EXPEDITED CONNECTION

Option B

Do you want to expedite your connection offer for all premises?

Yes No

1

Please download the Basic Connection Services Offer - up to 100 Amps [here](#). Do you agree to the Terms and Conditions of the offer?

Yes No

2

EXPEDITED CONNECTION

Option C

Do you want to expedite your connection offer for all premises?

Yes No

1

Please download the Basic Connection Services Offer - up to 100 Amps [here](#). Do you agree to the Terms and Conditions of the offer?

Yes No

2

Ausgrid will send you an offer that meets your supply requirements.



Summary - New Connection ONLY

DECLARATION

1

Applicant Name

Mr Test Asp

Application Date

20-May-2019

Price Description

Below 100 Amps Connection for Urban Area 1 x

Total Price

Price Including GST

AUD \$

AUD \$

[Terms and Conditions:](#)

In submitting this application you are engaging Ausgrid to provide you with a connection offer. Once submitted the fee charged is consumed. Ausgrid will aim to provide you with a written response within 10 business days. If additional work and/or fees are required, we will contact you to advise prior to providing the response.

Where this application requests an expedited connection, I declare that I have read and understood the terms and conditions of the connection offer and agree that if the connection is expedited that a contract based on that offer will be formed with Ausgrid on the date that Ausgrid receives the application. Where this application is being made on behalf of a retail customer or real estate developer, I declare that I have obtained the authority of that person to make this application of their behalf, including where applicable, making a request for expedition of the connection application.

*I acknowledge the terms & conditions.

2

Back

Save & Share

Download PDF

Pay

3

1. Review your **Declaration** that you understand the Total Price to be paid and the Terms and Conditions.
2. By clicking this box you **acknowledge the terms and conditions**.
3. Click Pay to move to the payment screen or Save & Share your application.

Note: You can Save & Share you application. Use the Save & Share function to email your application form to another person for payment and submission.



Note: The form will not be submitted to Ausgrid until payment has been made.

New Connection Only - Payment

Payment Confirmation

Do you want to proceed to payment for the amount : AUD \$9.15

Pay

Or

Share application for payment

Email Address



Share



Make a BPOINT Payment

Billers Code: 1261338 (Ausgrid - Ausgrid)

Ref#:

Amount (AUD):

Select your payment option:



Online Payment

You have entered the following details

Billers Code: 1261338 (Ausgrid - Ausgrid)

Ref#: 0011655

Payment Amount: AUD 9.15

Please enter your card details to proceed

Card Number:

Expiry Date:

CVN:

1. To proceed with payment select **Pay** and follow the payment options.



You can send the completed form to a third party to complete the payment. Then instruct that party they will receive an email and they should follow the link to make payment.

Note: only once payment is successfully submitted the application will be received and processed by Ausgrid.

Service Selection – New Connection and New Embedded Generation or Stand-by Generation

Note: This section relates to New Connection Only and New Embedded Generation or Stand-by Generation

New Connection Below 100 AMP

Reference Code : 0011616

Location

Applicant

Service Selection

Load Details

Summary and Payment

Complete

Services

What type of service are you seeking?

1



New Connection Only

2



New Connection and
New Embedded
Generation or Stand-by
Generation



To provide some of the answers to these questions you may need to consult an electrical contractor or ASP who may need to attend the site.

Back

Save & Share

Select the **service** you are seeking by clicking on one of the tiles.

- 1. New Connection Only.** Requires you to provide information regarding the physical electrical connection needed for Ausgrid to accurately assess your application and provide you with an appropriate Model Standing Offer for Connection Services.
- 2. New Connection and New Embedded Generation or Standby Generation.** Choose this for all embedded generation. This part of the form allows Ausgrid to determine if you intend to install embedded or standby generation as part of your application.

A generating unit is embedded if it will be connected in parallel with and exports to Ausgrid's network (even if only momentarily). Examples of embedded generation includes:


- Solar PV
- Wind turbine
- Battery
- Gas
- Bio gas
- Diesel
- Co and Tri-generation

Load Details – New Connection and New Embedded Generation or Stand-by Generation


New Connection Below 100 AMP


Reference Code : 0011616



New Connection 


***Proposed Point of Common Coupling** 1

***Asset Identifier** 2 

***Proposed Connection Point** 3 

***Proposed service length greater than 50 metres** Yes No

***Proposed Service Type** 4

***Service Voltage**
Low voltage 230/400v 



To provide some of the answers to these questions you may need to consult an electrical contractor or ASP who may need to attend the site.

NOTE: You may need to refer to NSW Service and Installation Rules for the definition of the terms.

This section requires you to provide information regarding the physical electrical connection needed for Ausgrid to accurately assess your application and provide you with an appropriate **Model Standing Offer for Connection Services**.

This section captures information regarding the components of the distribution system (premises connection assets) which is used to provide the connection service to the premises e.g. service cable, metering, new Ausgrid pole, pillar or substation etc.

1. Select the **proposed point of common coupling** from the drop-down menu.
2. Provide the **asset identifier** for the point of common coupling – if there is no asset identifier enter 'unknown'.
3. Select the **proposed connection point** from the drop-down menu – this is the component of the distribution system (premises connection assets) used to provide the connection services to the premises.

Specify the **proposed length of the service** – if greater than 50 meters, the applicant will be required to provide the exact length in meters.

4. Select the **service type and voltage** from the drop-down menus.

The above information specifies the start and finish points of your service wire as well as the type of connection. You should specify these matters carefully as they will become part of the connection contract unless modified by Ausgrid.

Load Details – New Connection and New Embedded Generation or Stand-by Generation

***Service Size** 100 Amps x

***Proposed Maximum Demand** ? Number of Phases v Phase A Phase B Phase C 2

Address – Gardinia Street, Narwee, 2209 3


***Premises Usage** v ***Property Type** VILLA x **Floor Number** v ***Unit/Shop Number** 7 ?

***Proposed Maximum Demand** ? Number of Phases v Phase A Phase B Phase C 4

***Are you intending to connect, alter or maintain controlled load at this premises?** ? Yes No 5 Embedded Generation 6

helpful tips Additional premise details can be added or duplicated details from the primary location. You must then select which premise requires **Embedded Generation**

Total Number of Premises 1 ?

Comments  This section is provided to supply additional comments, and upload attachments such as site diagrams

Attachment ? Browse File...

1. Select **Service Size** from the drop-down menu if Other than 100 Amps – specify the demand that is nearest to but above the calculated maximum demand in the additional field displayed.
2. Select the **Number of Phases** from the drop-down menu. Select each phase (Phase A, Phase B, Phase C) and enter the total proposed maximum demand for the site.
3. Provide the **details of all premises** in the application. (Address details will be pre populated from the location information). This is the number of NMIs applicants are requesting to be created. You are required to complete the information specific to each premises – Premises Usage, Property Type, Floor Number and Unit/Shop Number if applicable.
4. For each premises, select the Number of Phases from the drop-down menu; then for each phase (Phase A, Phase B, Phase C) specify the proposed maximum demand.
5. If intending to connect controlled load at the premises check 'yes'. Then select the controlled load tariff (Off-peak 1 or Off-peak 2) from the drop-down menu, and select the number of phases that this will apply to. Tick / select the premise/s requiring **Embedded Generation**.
6. Tick / select the premise/s requiring **Embedded Generation**.

Embedded Generation

New Connection + Embedded Generation

Address: Gardinia Street, Narwee, 2209 Usage: Residential Type: Villa Unit/Shop: 7

*How do you intend to operate your Embedded Generation with the Ausgrid network? Parallel Stand By Parallel and Stand By

*The system has been designed as a Stand-by Generation in accordance with AS3010 and NSW service and installation rules Yes No

*Embedded Generation is connected via Inverter Non Inverter Inverter and Non-Inverter

+ Inverter

*Energy Source

Inverter Details

*Inverter Type

Manufacturer Name

Model Number

*Inverter Phase

Inverter Rating kW/kW per Phase

Phase A

Phase B

Phase C



Click the Save button to store your information

Cancel

Save

*Energy storage will be configured to generate when the network is off. Yes No

1. Select how you will **operate the Embedded Generation**. By selecting "Parallel" you will be generating whilst connected to the Ausgrid network. By Selecting "Standby" or 'Parallel and Standby" you intend to operate your embedded Generation whilst either disconnected from the Ausgrid network, or both.
2. By Selecting '**Standby**' You will be asked to confirm your design is in accordance with AS3010 and NSW service and installation rules
3. Select how the **Embedded Generation** will be connected, then click **+ Inverter** to add an inverter
4. Select the **Energy Source** from the drop down list: **PV only, Battery only, PV and Battery, Fuel Cell** or **Other**.
5. Enter the **Inverter Details**, by selecting the **Inverter Type; Grid Connect, Multiple Mode, Micro Inverters** or **Other**. Select to **Invert Phase** from **Single** or **Three**, specify the total generation in Kw and complete the information relevant to the Inverter
6. Click **Save** to add the information
7. Confirm if **energy storage** will be configured to generate when the network is off

Embedded Generation

*Embedded Generation is connected via Inverter Non Inverter Inverter and Non-Inverter **1**

+ Non-Inverter

New Generation Unit (GU) Details

*Generation Type Manufacturer Name Model Number **2**

*Generation Phase GU Nameplate Rating in kW Phase A Phase B Phase C **3**



Click the **Save** button to store your information

Cancel Save

*Single Line Diagram **4**

*Control/protection settings and schematic diagrams

My installation is part of a multi-tenanted premises or embedded network that has existing Inverter connected Generation installed. Yes No **5**

1. If the **Embedded Generation** will be connected via a **Non Inverter** click to add details.

2. Select the **Generation Type** from the drop down list: **Rotating Machine, Hydro** or **Other**.

Note: You will be asked to supply the kW.

3. Select the **Generation Phase** from either **Single** or **Three**, then enter the **Generating Unit (GU) Nameplate rating in Kw**.

NOTE: Click to add the information and proceed.

4. Upload supporting documentation: **Single Line Diagram, Control / Protection Settings and Schematic Diagrams**

5. Click yes if your application is **multi-tenanted** or **embedded network**, such as apartment blocks, retirement village, shopping centres etc.

Embedded Generation

Declaration

I confirm that the system meets each of the following conditions:

- *I have made efforts to identify any other premises with Embedded Generation that share the network connection that this application pertains to, and have provided those details (where relevant) within this application.
- *The installer and equipment have current approval from the Australian Clean Energy Council (CEC).
- *Proposed inverter(s) complies with the voltage rise requirements of NSW Service and Installation Rules
- *Proposed inverter(s) have Volt-VAR and Volt-Watt response modes enabled.
- *In preparing this application I have considered the requirements of the Service and Installation Rules of NSW
- *In preparing this application I have considered the requirements of the AS/NZS3000:2018 The Wiring Rules.
- *In preparing this application I have considered the requirements of the AS/NZS4777 Grid connection of energy systems via inverters

1. Click the declaration for each item that:

i. You have made contact with the Property Managers / Body Corporates to confirm that you have all the information related to the site / facility at which the premises exist

ii. The installer and equipment have current approval from the Australian Clean Energy Council:
www.cleanenergycouncil.org.au/

iii. Inverters comply voltage rise requirements:
<https://energy.nsw.gov.au/government-and-regulation/legislative-and-regulatory-requirements/service-installation-rules>


iv. Inverters have Volt-VAR and Volt-Watt response modes enabled:
<https://energy.nsw.gov.au/government-and-regulation/legislative-and-regulatory-requirements/service-installation-rules>

v. You have considered the requirements of the Service and Installation Rules of NSW:
<https://energy.nsw.gov.au/government-and-regulation/legislative-and-regulatory-requirements/service-installation-rules>


vi. You have considered the requirements of the AS/NZS3000:2018 Wiring Rules, more information can be found at: <https://www.saiglobal.com/online/>

vii. You have considered the requirements of the AS/NZS4777 Grid Connection of energy systems via inverters: <https://www.saiglobal.com/online/>

Summary - Embedded Generation

Home Applications ▾ FAQ Help Contact Us

New Connection Below 100 AMPReference Code : 0012730



LOCATION

Retailer	1
Agl	
Land Title Type	
Strata	
Street Number/RMB	
8	
Location Address	
Gardinia Street, Narwee, 2209	
Land Zoning	
Urban	

[\[Edit\]](#) 2

APPLICANT

Applicant Type	
Asp On Behalf Of A Retail Customer Or Real Estate Developer	
Full Name	
Mr Test Asp	
Email Address	
Test@ASP.com.au	
Street Number/RMB	
10	

1. **Review** your application
2. You will have the option to edit information from this summary page by **Review** associated fees



Note: The form will not be submitted to Ausgrid until payment has been made.

Summary - Embedded Generation

EXPEDITED CONNECTION

Option A

Do you want to expedite your connection offer for all premises?

Yes No

1

You can download the Basic Connection Services Offer - up to 100 Amps for your records [here](#).



Ausgrid will send you an offer that meets your supply requirements.

OPTION A – [Expediting your connection offer](#)

1. Select **YES** to expedite your connection.

Note: By selecting 'Yes', and requesting an expedited connection offer, the connection application will be processed more efficiently because; if Ausgrid agrees that the offer is right for your proposed connection and there is no need for the offer to be sent to you, signed and returned to Ausgrid.



The expedited connection process allows you to save time by skipping the offer and acceptance steps to a connection contract. If you request expedition and indicate that a particular model standing offer is acceptable, the contract is taken to have begun on the day we received your connection application, provided we agree that any model standing offer you have nominated is appropriate. If you do not request expedition or you nominate an inappropriate model offer, it could add up to **55 days** to your connection process.

EXPEDITED CONNECTION

Option B

Do you want to expedite your connection offer for all premises?

Yes No

1

Please download the Basic Connection Services Offer - up to 100 Amps [here](#). Do you agree to the Terms and Conditions of the offer?

Yes No

2

Ausgrid will send you an offer that meets your supply requirements.



OPTION B – [Accept a Model Standing Offer](#)

1. Select **NO** if you do not want to expedite your connection offer.
2. Select **YES** if you agree to the Terms and Conditions of the offer. You are able to Review the models standing offer by selecting [\(here\)](#)

Note: The connection application will be processed efficiently because if Ausgrid agrees that the offer is right for your proposed connection and there is no need for the offer to be sent to you, signed and returned to Ausgrid.

EXPEDITED CONNECTION

Option C

Do you want to expedite your connection offer for all premises?

Yes No

1

Please download the Basic Connection Services Offer - up to 100 Amps [here](#). Do you agree to the Terms and Conditions of the offer?

Yes No

2

Ausgrid will send you an offer that meets your supply requirements.



OPTION C – [Negotiate a connection offer](#)

1. Select **NO** if you do not want to expedite your connection offer.
2. Select **NO** if you don't agree to the **Terms and Conditions** of the offer.



Note: if you do not accept the terms and conditions, Ausgrid will send you an offer that meets your supply requirements.

Summary - Embedded Generation

DECLARATION

Applicant Name

Mr Test Asp

Application Date

20-May-2019

Price Description

Below 100 Amps Connection for Urban Area 1 x

Total Price

Price Including GST

AUD

AUD

[Terms and Conditions:](#)

In submitting this application you are engaging Ausgrid to provide you with a connection offer. Once submitted the fee charged is consumed. Ausgrid will aim to provide you with a written response within 10 business days. If additional work and/or fees are required, we will contact you to advise prior to providing the response.

Where this application requests an expedited connection, I declare that I have read and understood the terms and conditions of the connection offer and agree that if the connection is expedited that a contract based on that offer will be formed with Ausgrid on the date that Ausgrid receives the application. Where this application is being made on behalf of a retail customer or real estate developer, I declare that I have obtained the authority of that person to make this application of their behalf, including where applicable, making a request for expedition of the connection application.

*I acknowledge the terms & conditions.

2

Back

Save & Share

Download PDF

Pay

3

1. Review your **Declaration** that you understand the Total Price to be paid and the Terms and Conditions.
2. By clicking this box you **acknowledge the terms and conditions**.
3. Click Pay to move to the payment screen or Save & Share your application.

Note: You can Save & Share your application. Use the Save & Share function to email your application form to another person for payment and submission.



Note: The form will not be submitted to Ausgrid until payment has been made.

Embedded Generation - Payment

Payment Confirmation

Do you want to proceed to payment for the amount : AUD

Pay

Or

Share application for payment

Email Address

Share



Make a BPOINT Payment

Biller Code: 1261338 (Ausgrid - Ausgrid)

Ref#: 0011659

Amount (AUD):

Select your payment option:  



Online Payment

You have entered the following details

Biller Code: 1261338 (Ausgrid - Ausgrid)

Ref#: 0011659

Payment Amount: AUD :

Please enter your card details to proceed

Card Number: 

Expiry Date: MM YY

CVN:

<< Back Proceed >>

1. To proceed with payment select **Pay** and follow the payment options.



You can send the completed form to a third party to complete the payment. Then instruct that party they will receive an email and they should follow the link to make payment.

Note: only once payment is successfully submitted the application will be received and processed by Ausgrid.