


Glare Shield of BRP391/392/393/711


Mounting instruction

Glare shield of BRP391/392/393

1. Hook 3 clips in one side of glare shield on housing

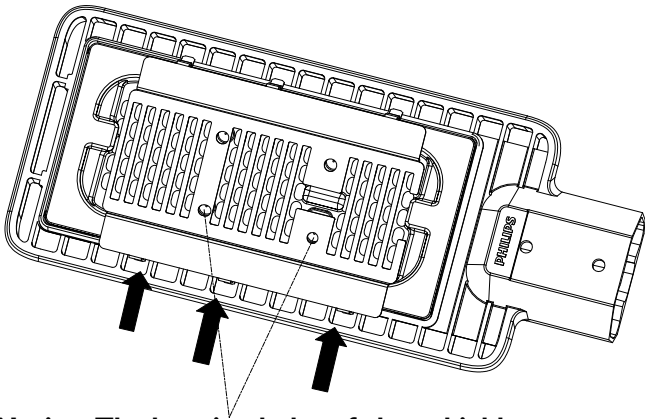


Notice: The location holes of glare shield should aligned with spheres of optical lens

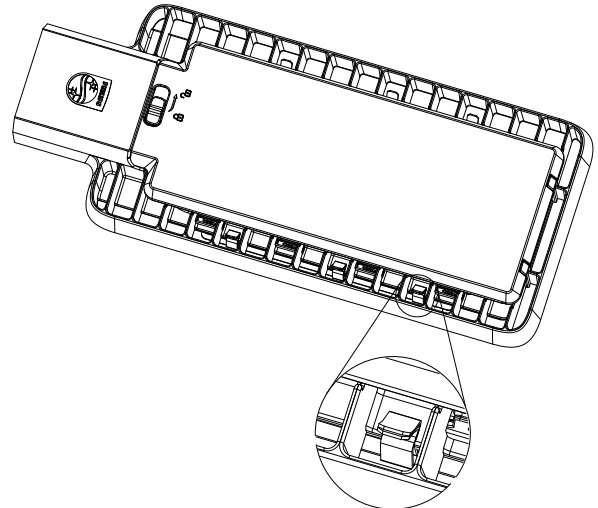

Notice: Make sure the clips hook on back side of housing

2. Press down 3 clips on another side and ensure all 6 clips hooked tightly

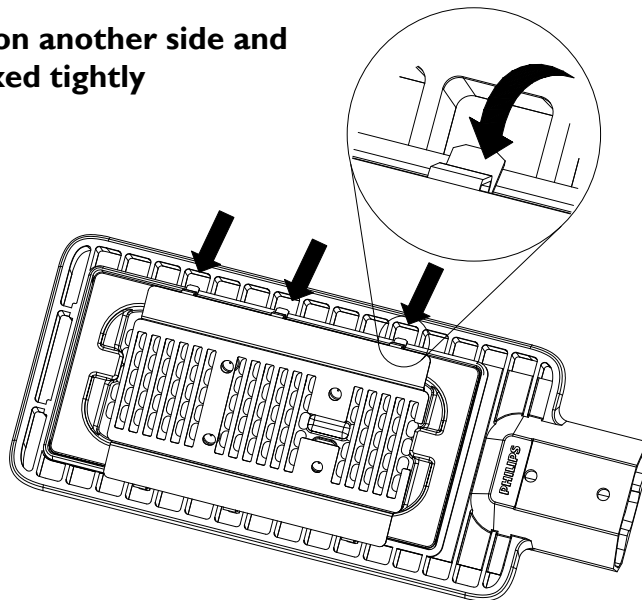


Caution

1. Before assembling glare shield, the protective films attached on glare shield both sides must be removed.
2. Suggest to wear glove when assembling glare shield.


3. Ensure glare shield assemble in correct direction

BRP391

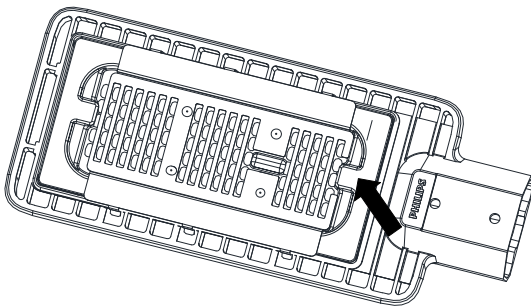


Ensure that open frame side is position at bottom

BRP392

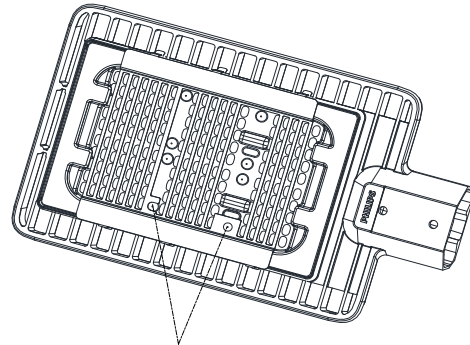

Notice: The slots(2x) must be aimed with raised peanuts of PC cover

BRP393

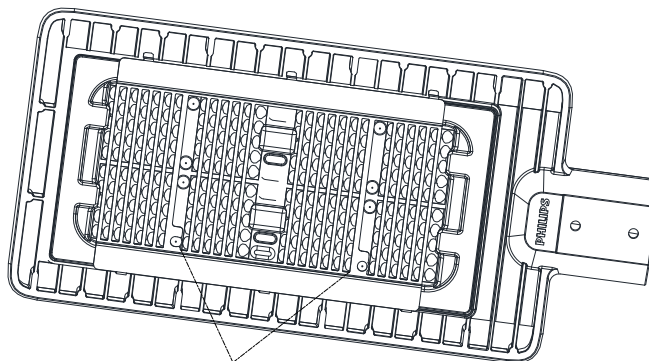


Notice: The slots(2x) must be aligned with raised peanuts of PC cover


* At correct position, Glare Shield will be covering the bottom part of the option

Glare shield of BRP711

1. unscrew 4 screws on optical lens as shown

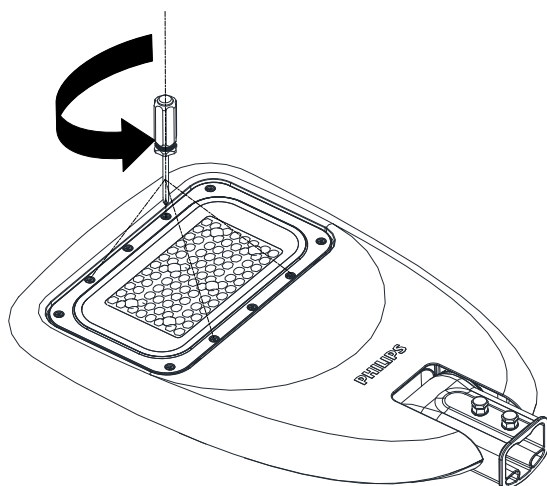


2. assemble glare shield on optical lens, take out 4 screws and washers in package box, and tighten these screws and washers (torque: 1 N.m)

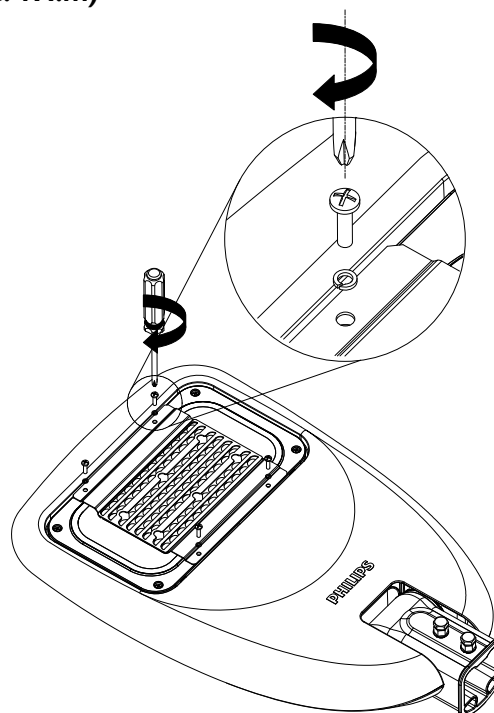

BRP711

Notice: The slots(6x) must be aligned with raised peanuts of PC cover

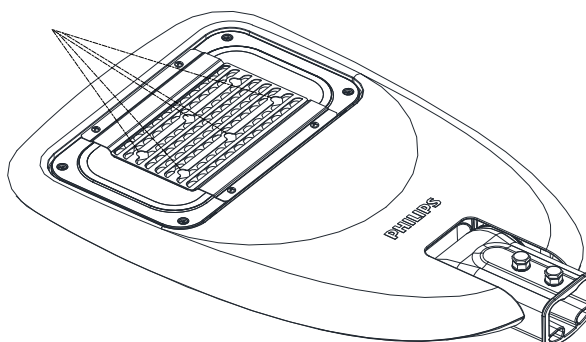

*** At correct position, Glare Shield will be covering the bottom part of the option**